


## **Repair Parts Sheet**

RC251, RC252, RC254, RC256, RC258, RC2510, RC2512, RC2514

Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
Reference nr. L2804	Rev.B	00/0040	A - RC251 - RC252 - RC254
	nev.b	08/2010	B - RC256/8/10/12/14

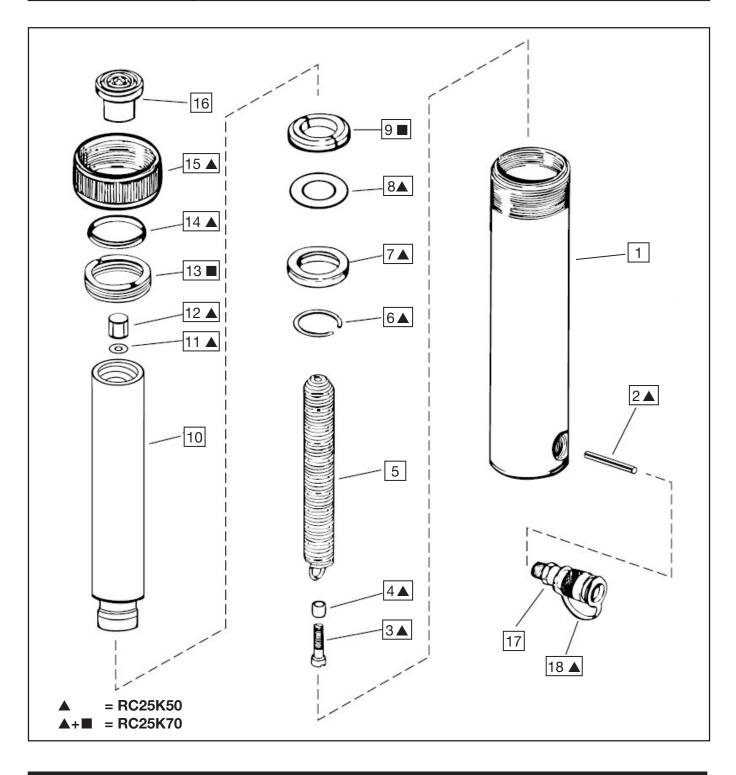

Repair Parts List							L 2804			
Item nr.	Description	Qty.	RC251	RC252	RC254	RC256	RC258	RC2510	RC2512	RC2514
1	Base	1		Not available for services, order a new cylinder.						
2	Screw	1	<b>A</b>	<b>A</b>	<b>A</b>					
2	Roll Pin	1				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
3A	Self tapping screw	1	<b>A</b>	<b>A</b>	<b>A</b>					
3B	Screw	1				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
4	Bushing	1				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
5	Spring (includes items 4,11&12)	1	L202110SR	L202110SR	CB425110SR	DD1188110SR	DD1187110SR	DD1186110SR	DD1185110SR	DD1184110SR
6	Retaining ring	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
7	U Cup	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
8	Washer	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
9	Rod Bearing	1			•	•	•	•		•
10	Plunger	1	Not available for services, order a new cylinder.							
11	Gasket	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
12	Nut	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
13	Stop ring	1			•	•	•			
14	Wiper	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
15	Thread protector	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
16	Saddle	1	A252G	A252G	A252G	A252G	A252G	A252G	A252G	A252G
17	Coupler	1	CR400	CR400	CR400	CR400	CR400	CR400	CR400	CR400
18	Dust cap	1	<b>A</b>	<b>A</b>	<b>A</b> .	<b>A</b> .	<b>A</b> .	<b>A</b>	<b>A</b>	<b>A</b>
19	Coupler 0 ring (not shown)	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
20	Enerpac decal (not shown)	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
21	Caution decal (not shown)	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
22	Saddle 0 ring (not shown )	1	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>

- Indicates items included in and only available as part of repair kit RC25K50.
- = Indicates items included in and only available as part of repair kit RC25K70. RC25K70 includes 1x RC25K50.



Item nr.	Model	Torque / Remarks
3A	RC251 up to RC254	5.4 - 6.8 Nm 4 - 5 ft lbs
3B	RC256 up to RC2514	Firmly tighten screw to assure contact with the plunger
8	RC256 up to RC2514	Washer to be placed with sharp edge towards U Cup
12	all models	11 - 14 Nm 8 - 10 ft lbs
13	all models	7.9 - 10.2 Nm 70 - 90 in lbs secure with Loctite 222
17	all models	34 - 81 Nm 25 - 60 ft lbs
17	all models	Use Loctite 545 or teflon tape



To maintain your warranty
Have your products inspected and repaired
by an authorised Enerpac Service Centre

www.enerpac.com