

Repair Parts Sheet

Hydraulic/ Mechanical Spreading Wedges FSM8 / FSH14 / FSC14


L4389

Rev. A

08/19

FSM8 Date Codes Beginning with the Letter "A" FSH14 Date Codes Beginning with the Letter "A" FSC14 Date Codes Beginning with the Letter "A"

To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil. Enerpac recommends that all kit components be installed to ensure optimum performance of the repaired product.

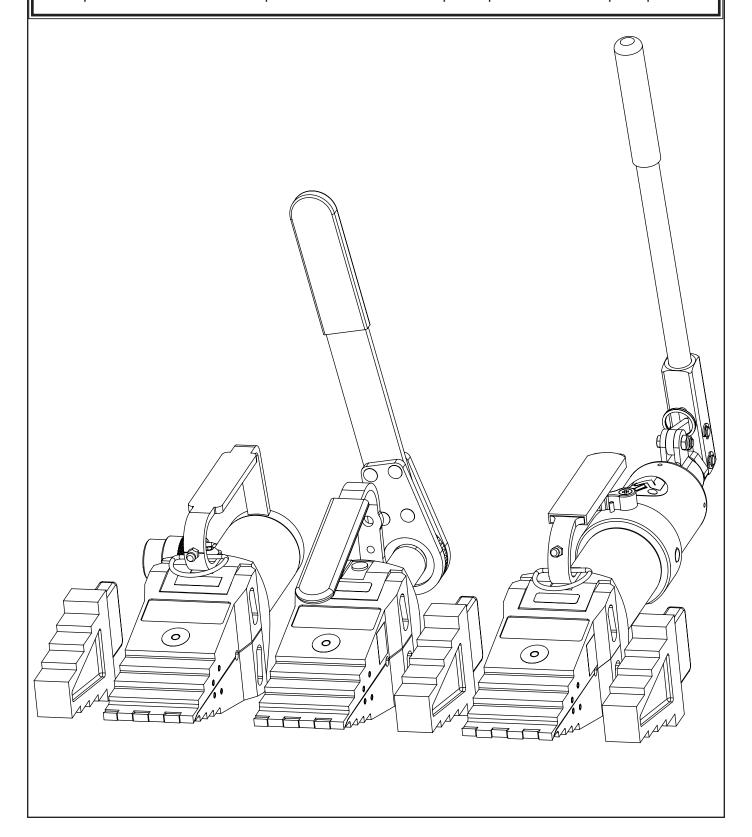

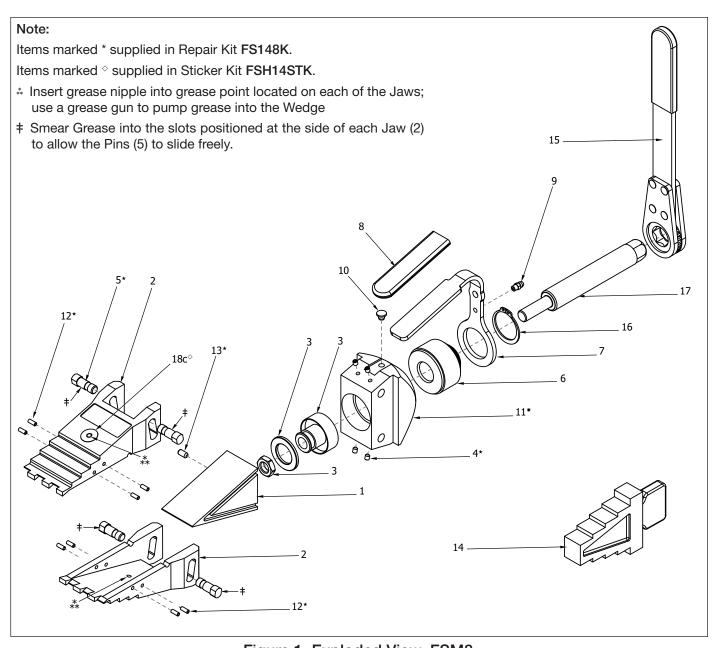


Figure 1, Exploded View, FSM8

Item	Description	Qty	Part Numbers		
1	Wedge (includes 1 x item 13)	1	EN300101		
2	Jaws (includes 1 set x item 12, 2 x item 18b, 1 x item 18c)	1 set of 2	EN300201		
3	Thrust Bearing Assembly.	1	EN301802SR		
4	Set Screws	1 set of 4	*		
5	Pin	1 set of 4	*		
6	Male / Female Coupling	1	EN301901		
7	Handle 1 EN3020				
8	Handle Sleeve	1	EN401702		
9	Grease Pin	1	EN310601		
10	Plastic Cap	1	EN060101		
11	Body	1	*		
12	Split Pins	1 set of 8	*		
13	Set Screw	1	*		
14	Safety Block	1	SB1		
15	Spanner	1	SW22		
16	Circlip	1	EN302101		
17	Pushrod	1	EN301802SR		
18a	Warning Read Instruction Sticker (not shown)				
18b	Pinch Point Sticker (not shown) 2		♦		
18c	Circular Grease Point Sticker	1	♦		
19	FSM8 Serial no. Sticker (not shown)	1	Only available upon request		

Optional Accessories List - FSM8 Wedge Spreader						
Item Description Qty Part Numbers						
1	Safety Lanyard Kit	1	FSC1			
2	Stepped Block Kit	1	FSB1			

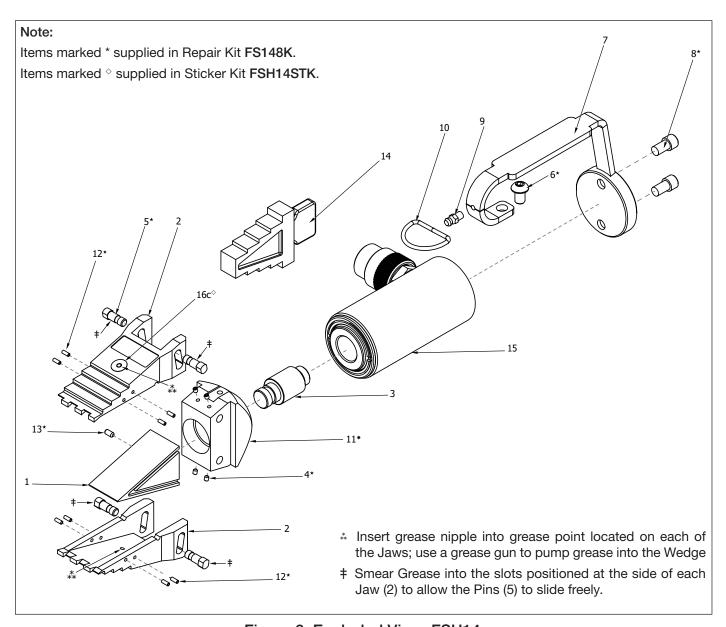


Figure 2, Exploded View, FSH14

Repair Parts List For Figure 2 - FSH14					
Item	Description	Qty	Part Numbers		
1	Wedge (includes 1 x item 13)	1	EN300101		
2	Jaws (includes 1 set x item 12, 2 x item 16b, 1 x item 16c) 1 set of 2 EN3002				
3	Connector	1	EN300301		
4	Set Screws	1 set of 4	*		
5	Pin	1 set of 4	*		
6	Handle Screw	1	*		
7	Handle	1	EN300701		
8	Base Screw	1 set of 2	*		
9	Grease Pin	1	EN310601		
10	D-Ring	1	EN2080001		
11	Body	1	*		
12	Split Pins	1 set of 8	*		
13	Set Screw	1	*		
14	Safety Block	1	SB1		
15	Cylinder Assembly	1	RC102		
16a	Warning Read Instruction Sticker (not shown)	1	♦		
16b	Pinch Point Sticker (not shown)	1	\Diamond		
16c	Circular Grease Point Sticker	2	♦		
17	FSH14 Serial no. Sticker (not shown)	1 only	Only available upon request		
★ Repair Kit FS148K ★ Not available		♦ Sticker Kit FSH14STK			
Note: If p	roduct date code is 2005 or earlier, replace both Ite	m 1 and Item 2 a	t the same time.		

Note: Refer to the RPS for RC-102 for complete parts list and spares kits.

Optional Accessories List - FSH14 Wedge Spreader					
Item	Description	Qty	Part Numbers		
1	Safety Lanyard Kit	1	FSC1		
2	Stepped Block Kit	1	FSB1		

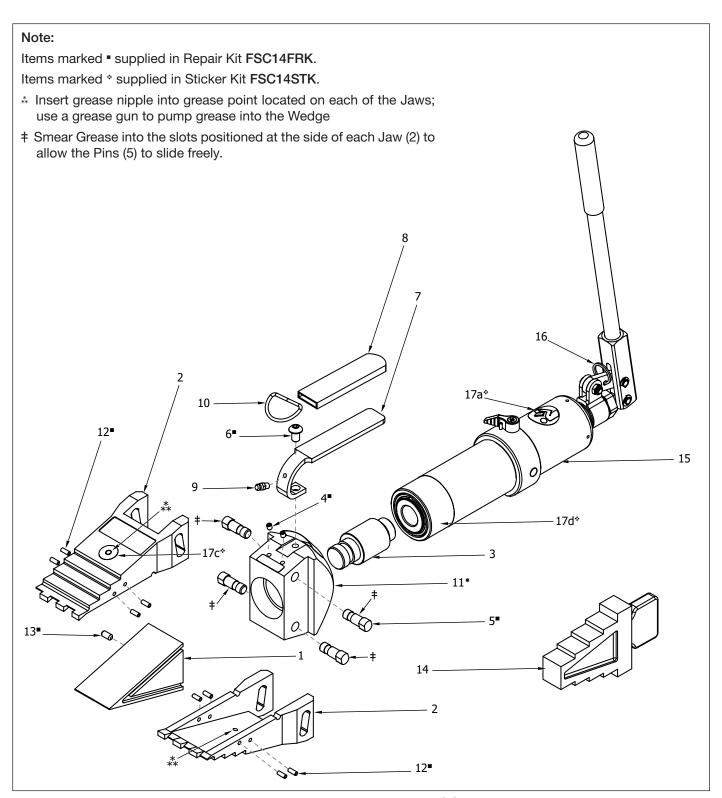


Figure 3, Exploded View, FSC14

Repair Parts List For Figure 3 – FSC14 Wedge Spreader Head					
Item	Description	Qty	Part Numbers		
1	Wedge (includes 1 x item 13)	1	EN300101		
2	Jaws (includes 1 set x item 12, 2 x item 17b, 1 x item 17c	1 set of 2	EN300201		
3	Push Pin	1	EN300301		
4	Set Screws	1 set of 4	•		
5	Pin	1 set of 4			
6	Handle Screw ■	1			
7	Handle	1	FOOT ALIDIC		
8	Handle Sleeve	1	FSC14HRK		
9	Grease Pin	1			
10	D-Ring	1	EN2080001		
11	Body	1	*		
12	Split Pins	1 set of 8			
13	Set Screw	1	•		
14	Safety Block	1	SB1		
15	Integral Pump + Cylinder	1	EN500701		
16	Split Ring	1	EN311601		
17a	Decal Read Instruction	1	*		
17b	Pinch Point Sticker (not shown)	2	*		
17c	Circular Grease Point Sticker	1	*		
17d	FSC-14 Cylinder Decal	1	*		
18	FSC14 Serial no. Sticker (not shown)	1	Only available upon request		
■ Repair Kit FSC14FRK		❖ Sticker Kit FSC14STK			

* Not available

Optional Accessories List - FSC14 Wedge Spreader					
Item	Description	Qty	Part Numbers		
1	Safety Lanyard Kit	1	FSC1		
2	Stepped Block Kit	1	FSB1		

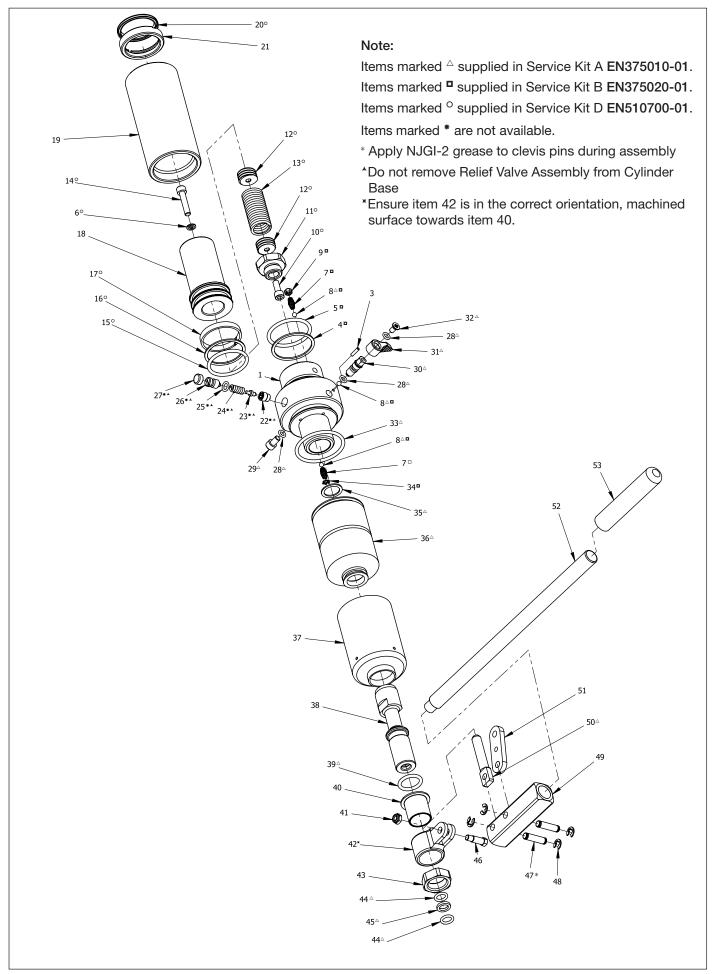


Figure 4, Exploded View, FSC14 Pump + Cylinder

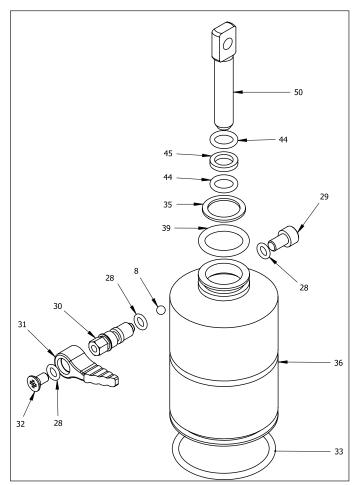


Figure 5, Exploded View, FSC14 Service Kit A

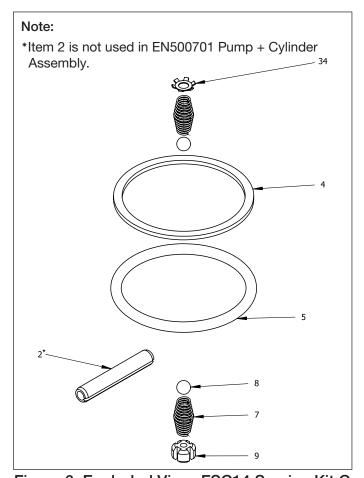


Figure 6, Exploded View, FSC14 Service Kit C

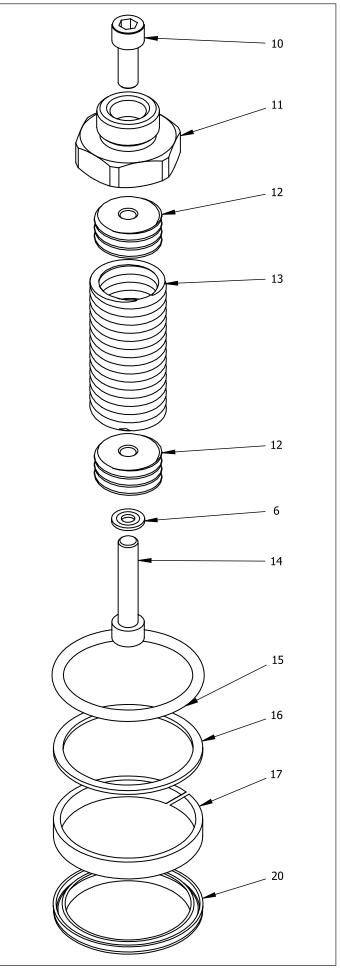


Figure 7, Exploded View, FSC14 Service Kit D

Repair Parts List For Figures 4, 5, 6, 7 – FSC14 Pump + Cylinder (500701-01)								
Item	Description	Qty	Kit		Item	Description	Qty	Kit
1	Cylinder Base	1	EN375101		28	O-Ring	3	
3	Roll Pin	1	EN510712		29	Oil Fill Screw	1	Δ
4	Back-Up Ring	1	0		30	Relief Valve Screw	1	Δ
5	O-Ring	1			31	Relief Valve Knob	1	Δ
6	M6 Gasket Seal	1	0		32	Fixing Screw	1	Δ
7	Spring	2			33	O-Ring	1	Δ
8	Steel Ball	3	Δ□		34	Spring Lock	1	0
9	Seat	1			35	Washer	1	Δ
10	Screw	1	0		36	Reservoir Bladder	1	Δ
11	Stop Collar	1	0		37	Bladder Housing	1	EN372301
12	Spring Lock	2	0		38	Pump Piston Housin	g 1	EN376901
13	Spring	1	0		39	O-Ring	1	Δ
14	Screw	1	0		40	Piston Housing Cap	1	EN372401
15	O-Ring	1	0		41	Anti-Loosen Nut	1	EN373301
16	Back-Up Ring	1	0		42	Swivel Clevis*	1	EN372501
17	Split Ring	1	0		43	Retaining Nut	1	EN372601
18	Piston Rod	1	EN510701		44	O-Ring	1	Δ
19	Puller Body	1	EN510708		45	Back Up Ring	1	Δ
20	Wiper	1	0		46	Clevis Screw	1	EN373201
21	Fasten Nut	1	EN510709		47	Clevis Pin *	2	EN372901
22	Cone Seat*	1	*		48	Retaining Ring	2	EN373001
23	Cone*	1	*		49	Handle Clevis	1	EN377101
24	Long Separator Spring*	1	*		50	Pump Piston Rod	1	Δ
25	O-Ring*	1	*		51	Link Connector	1	EN373101
26	Overload Cover Screw*	1	*		52	Handle Rod	1	EN373401
27	Cap*	1	*		53	Handle Grip	1	EN306502
△ Service Kit A EN375010-01 Service Kit C EN375020-01 O Service Kit D EN510700-01						700-01		
* Not available								

Note: The quantity of a part included in a kit will sometimes be less than the total quantity of that part shown in the repair parts list.

NOTES

